THE SHARPER IMAGE®

Waterfall Foot Spa

CA842 Instructions

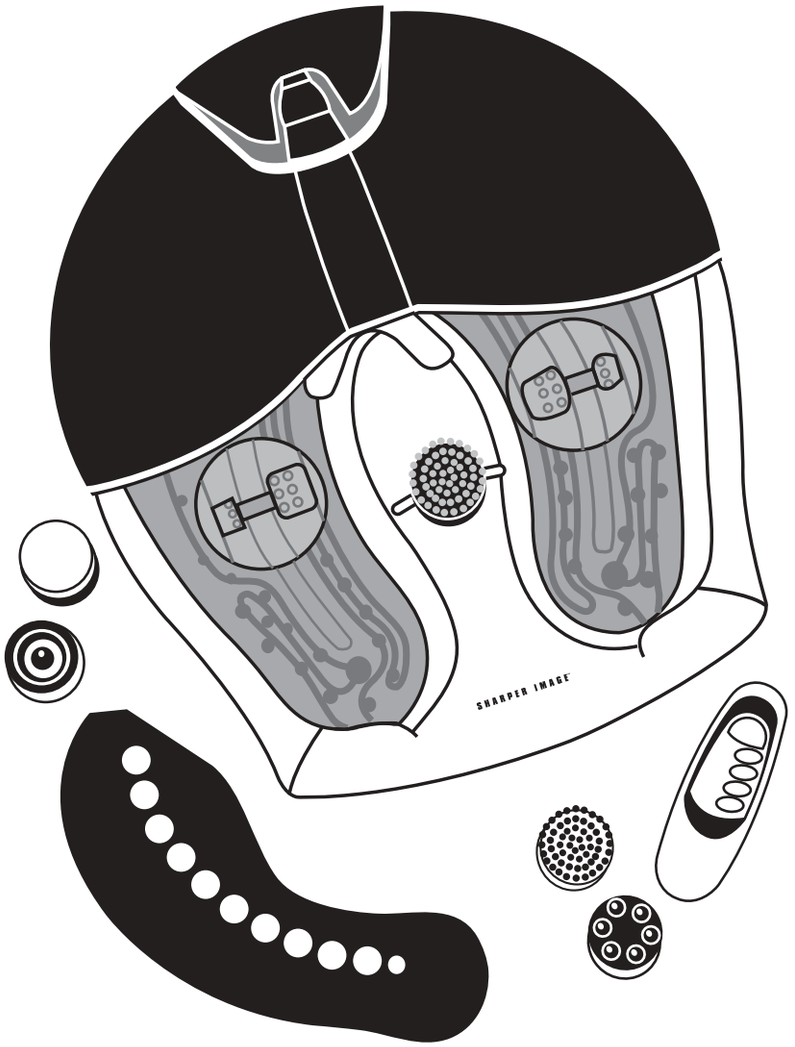

Read and save these instructions.

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life easier and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,

Richard Thalheimer
Founder, Chairman and Chief Executive Officer

Call 1-800-344-4444 for 24-7 ordering and customer service, or go to **www.sharperimage.com**, *our complete online store.*

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed. Read all instructions before using this appliance.

CAUTION

- The Waterfall Foot Spa should not be used in the following cases without consulting a physician: tuberculosis, benign or malignant tumors, hemorrhages, inflammations of the skin, phlebitis and thrombosis, open or fresh wounds, bruises, broken skin or varicose veins, undetermined calf pain or joint pain.
- Consult a physician if you have any questions regarding therapeutic use of the Foot Spa. Do not use before consulting your physician if you are experiencing unexplained pain or swollen muscles or have had a serious muscular injury.
- Keep away from children.
- Discontinue use of the Waterfall Foot Spa if pain increases or swelling occurs after use.
- If you are pregnant, please consult a physician before using.

DANGER

To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in the shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place or drop into water or other liquid.

To reduce the risk of burns, fire, electric shock or injury:

- Appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off attachments.
- Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury.
- Close supervision is necessary when this appliance is used by, on or near children and physically challenged or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.

DANGER

- Never operate this appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged or dropped in water. Return appliance to a service center for examination and repair.
- Do not carry appliance by supply cord or use cord as a handle.
- Keep cord away from heated surfaces.
- Never operate appliance with the air openings blocked. Keep air openings free of lint, hair and other debris.
- Never drop or insert any object into any opening.
- To disconnect, turn all controls to OFF, then remove plug from outlet.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not attempt to plug or unplug unit while feet are in water.
- Do not stand on or in the Waterfall Foot Spa. Use only while seated. Place feet in massager and remove feet from massager only when in a seated position.

DANGER

- The unattended use of heat by children or incapacitated persons may be dangerous.
- Never operate on a soft surface, such as a bed or couch, where air openings may be blocked.
- Use heated surface carefully as it may cause serious burns. Do not use on sensitive skin areas or where there is poor circulation.
- Connect appliance to a properly grounded outlet (see Grounding Instructions).

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

Unit must be grounded. If it malfunctions or breaks down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product's cord features an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate three-prong outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided. If plug will not fit in an outlet, have a proper outlet installed by a qualified electrician.

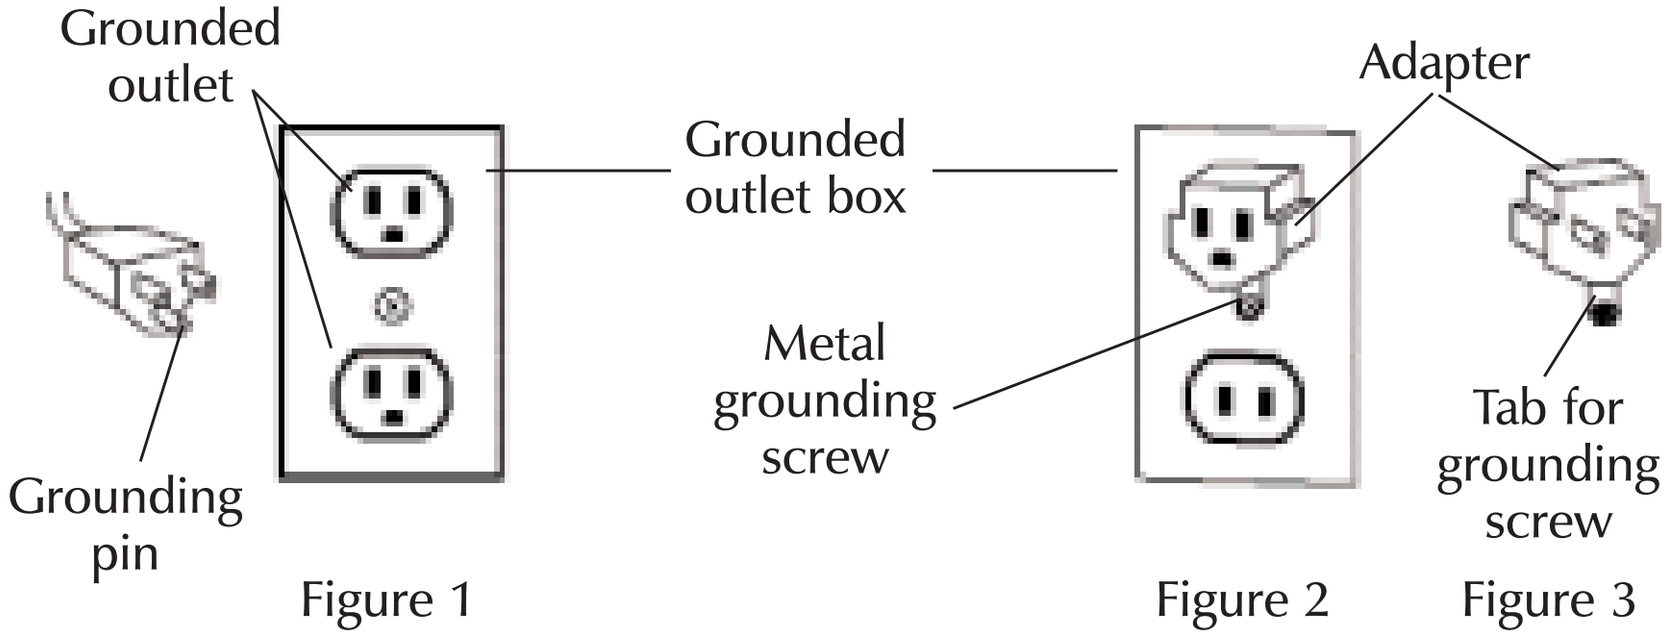

This product is for use on a nominal 120V circuit, and has a three-prong grounding plug as shown in figure 1. A temporary adapter, as shown in figures 2 and 3, may be used in order to connect this plug to a two-prong receptacle, as shown in figure 2, if a properly grounded outlet is not available. The temporary adapter should only be used until a qualified electrician can

DANGER

install a properly grounded outlet (figure 1). The green colored tab extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw (figure 2).

Note: Temporary adapters, such as the type mentioned above, cannot be used in Canada.

Instructions

Package Contents

- Floating infrared remote control
- Two spinning rollers for deep massage
- Splash cover
- Six-foot cord
- Five removable spinning attachments:
  All-purpose massager
  Buffing stone
  Scrubbing brush

Package Contents

Arch massager
Soft touch massager

- Two soft gel pads
- Two extra-soft gel pads

OPERATION

1. Remove the battery cover from the remote and insert 2 AAA batteries (purchase separately), observing proper +/- polarities as indicated inside the battery compartment. Replace cover.
2. Make sure the Waterfall Foot Spa is unplugged and OFF.
3. Place the unit on the floor and fill it with warm or cold water. Do not fill above water level indicator.
4. Plug the unit into wall outlet (see Grounding Instructions). Never plug or unplug the unit while your feet are in water.
5. Sit in a chair and place feet in water. Never stand in the Waterfall Foot Spa.
6. To turn the spa on, press the **ON/OFF** button on the wireless remote control.

OPERATION

7. To select the desired combination of spa actions, press **VIBRATION**, **BUBBLE** and/or **WATER-JET** on the remote control.

Note: The heat function is active during the vibration and bubble action. This feature is designed to maintain the temperature of warm water, not to heat cold water.

8. To activate the waterfall feature, first activate the water-jet function using the remote, then move the **LEVER** under the splashguard to the center. Water falls from the splashguard onto the top of your feet. To turn off the waterfall, move the **LEVER** back to the side.

Note: The waterfall feature only works after the water jets have been activated.

9. To activate the deep massage function, slide feet over the rollers on the bottom of the spa. Insert the gel pads for additional comfort. The spa can also be used as a foot massager without water.

Note: You can remove the rollers by lifting the edges out of the grooves.

10. To use one of the spinning pedicure attachments, place the desired attachment on the central spinning hub. To activate

OPERATION

the spinning, press the bottom of your foot down on the attachment.

11. To turn off the Waterfall Foot Spa, press the **ON/OFF** button on the wireless remote control.
12. Take feet out of the spa and disconnect it from outlet.
13. Empty the water from the rear of unit from the line cord side only.

Generally, a massage should not last longer than 10-15 minutes. The Waterfall Foot Spa turns off automatically after 20 minutes. Treatment may be applied once or twice daily as desired. Allow the unit to cool before using it again.

Care

- To clean the Waterfall Foot Spa, rinse with water.
- Do not submerge in water.
- Wipe with a damp cloth.
- Do not use any strong chemical cleaners.
- Store unit in a dry location with a loosely wrapped cord.

WARRANTY

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for 90 days from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2003

Sharper Image Corporation
650 Davis St., San Francisco, CA 94111
(415) 445-6000

Shop online: www.sharperimage.com

Due to continuing improvements, actual product may differ slightly from the product described herein.
V1 05/03